

remote control RC001

operating instructions




Your Westin extractor can be operated by radio remote control.

Turning the motor on starts the extractor fan at speed 1, the speed can be increased or decreased using the plus and minus buttons. The LED lights indicate the current fan speed.

Your extractor has a timed function on speed 4, the extractor will automatically drop down to speed 3 after 5 minutes.

If there is more than one extractor using a Westin radio remote controller in the vicinity (in your house or perhaps a neighbour) then you will need separate radio transmission codes for each controller. Follow the instructions below to generate a new transmission code.

If you experience difficulties with your remote control then it is recommended that you replace the battery and perform a System Reset as detailed below. We recommend replacing the battery annually to maintain optimal performance of the remote control unit.

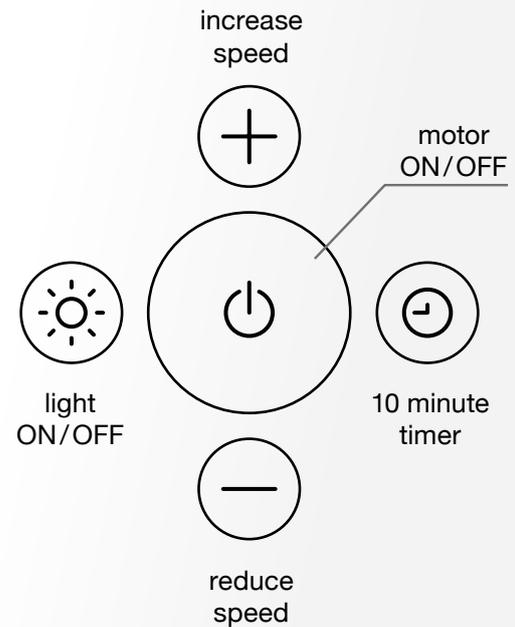

GENERATING A NEW TRANSMISSION CODE:


The transmission code can be changed if the remote control interferes with other devices.

- ① Simultaneously press and hold down the three buttons shown for 2 seconds.
- ② The LEDs will light.
- ③ Within 5 seconds, press the two buttons shown.
- ④ The LEDs will flash 3 times to indicate success.

Register the new transmission code:

After changing the transmission code on the remote control unit, your cooker hood needs to register the new code in order to respond to commands.

- ⑤ Switch off the mains electrical supply (power) to the cooker hood. There is usually a switch in the kitchen for this. Some hood control systems feature a red switch (usually inside the hood) which can be used instead. Wait 10 seconds and switch the power on again.
- ⑥ Within 15 seconds, press the Light Button to synchronise the cooker hood with the remote control unit.

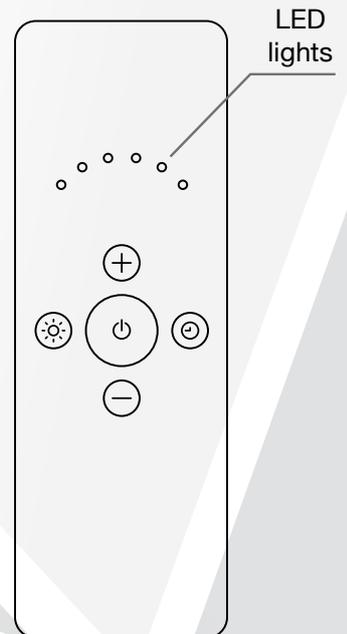

TO PERFORM A SYSTEM RESET:

- ① Simultaneously press and hold down the three buttons shown for 2 seconds.
- ② The LEDs will light.
- ③ Within 5 seconds, press the two buttons shown.
- ④ The LEDs will flash 6 times to indicate success.
- ⑤ Switch off the mains electrical supply (power) to the cooker hood. There is usually a switch in the kitchen for this. Some hood control systems feature a red switch (usually inside the hood) which can be used instead. Wait 10 seconds and switch the power on again.
- ⑥ Within 15 seconds, press the Light Button to synchronise the cooker hood with the remote control unit.

model	RC001
alkaline battery	1x 12V – model 27A
operating frequency	433.92 MHz
max. consumption	25 mA
operating temperature	-20 to +55 °C
dimensions	130x45x15 mm

www.westin.co.uk
sales@westin.co.uk
 +44 (0) 1484 421585